
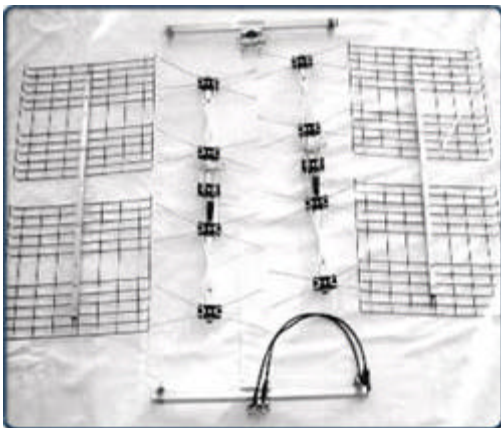


# Terrestrial Digital – DB8 Installation Guide

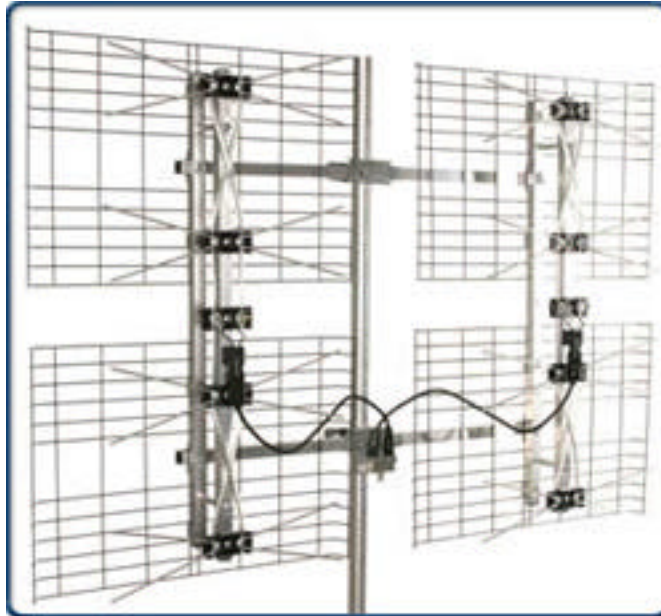


## The DB8 comes with:

- ✍ 2 reflectors
- ✍ 2 sets of elements with transformers
- ✍ 4 sets of bolts with aluminum sleeves
- ✍ 2 cross braces
- ✍ 1 low loss combiner
- ✍ 2 coax connecting cables
- ✍ 2 mast clamps

## Assembly Instructions




1. Attach the reflectors to the elements using the supplied bolts. Slide the spacers over the bolts so the front and back halves are separated by 3". As shown in this side view

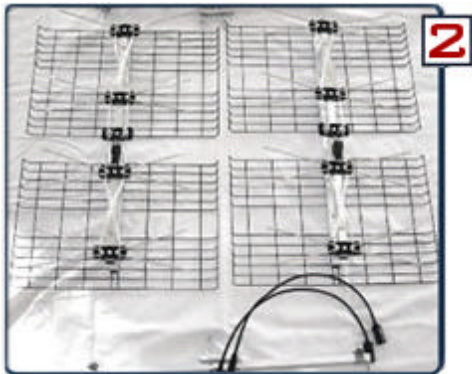

2. Pictured to your left are the assembled elements and reflectors. The cross-braces waiting to be attached.



3. Next, attach the cross braces to the rear of the antenna as shown.

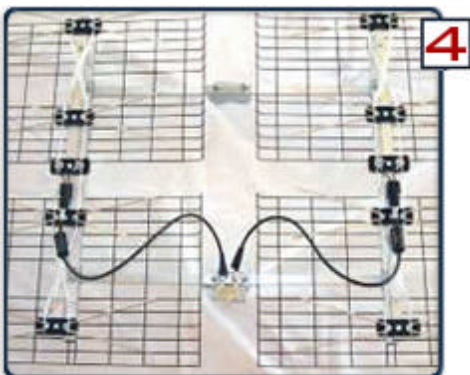

4. After the cross braces are attached, connect the cables from the combiner to the transformers. Note, the combiner is pre-attached to the lower bar.